



## Westerly 1-3/16 in (30 mm) DIA Cabinet Knob - Polished Nickel

**Part Number: A53718PN**

Westerly Round Knob, 1-3/16 in (30 mm), Polished Nickel

Retro is revolutionized with an industrial twist on the classic urban lines of Westerly. Features sleek, modern lines and a substantial feel.

<div><br></div>

Collection	Westerly
Colour Group	Silver
Finish Code	Polished Nickel
Knob Diameter	30 mm
Material	Zinc Diecast
Mounting Type	8-32 Machine Screw
Projection (Height)	30 mm
Style Family	Transitional
Type	Knob

### Product Description

The Amerock A53718PN Westerly(TM) 1-3/16in(30mm) DIA Knob is finished in Polished Nickel. Retro is revolutionized with an industrial twist on the classic urban lines of Westerly. Features sleek, modern lines and a substantial feel. The classic Satin Nickel finish provides a sleek, lightly brushed, warm grey metallic look. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

### Product Advantages


- Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

### Included Products

Industry standard mounting hardware



## Technical Documents

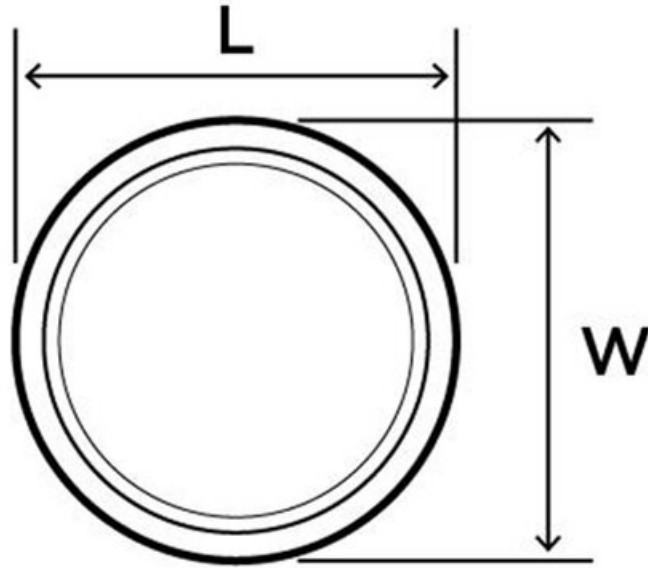

**L (Length) = 1-3/16in(30mm)**


**W (Width) = 1-3/16in(30mm)**

Profile# 53718

View this product online at <https://marathonhardware.com/pd/A53718PN>



## Technical Documents

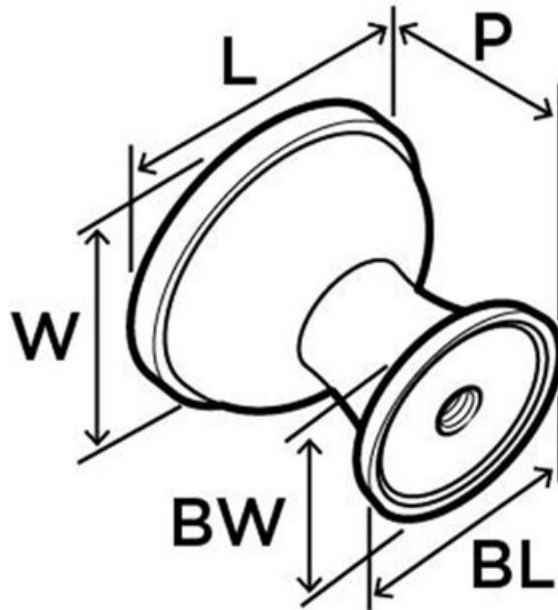

**L (Length) = 1-3/16in(30mm)**

**W (Width) = 1-3/16in(30mm)**

**P (Projection) = 1-3/16in(30mm)**

**BL (Base Length) = 13/16in(21mm)**

**BW (Base Width) = 13/16in(21mm)**

Profile# 53718

View this product online at <https://marathonhardware.com/pd/A53718PN>




## Technical Documents



### INSTALLING NEW CABINET HARDWARE

#### Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is your to make!

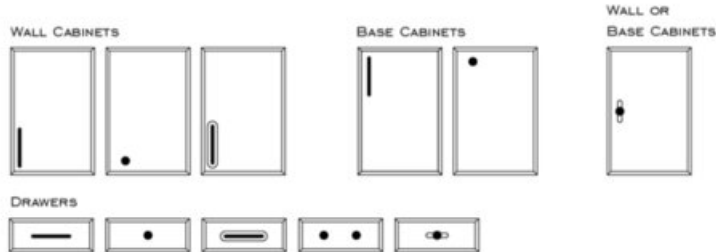

#### Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, then a 1/4" hole is required with studs sitting securely in the wood.



#### IMPORTANT Screw Information

Amerock® includes 8-32 x 1" long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4" thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4", then you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) used should be 1/4" longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4" thick front attached to a 3/4" thick drawer box. In this situation, the total drawer thickness is 1-1/2", making a 1-3/4" long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock may include metric screws instead of UNC screws.

View this product online at <https://marathonhardware.com/pd/A53718PN>

