



# Mulholland 6-5/16 in (160 mm) Center Cabinet Pull - Golden Champagne

Part Number: A53530BBZ

Mulholland Pull, 6-5/16 in (160 mm), Golden Champagne

Elegantly designed with an inviting blend of sophisticated lines, soft curves and warm tones, the traditional style of Mullholland is a timeless classic.

<div><br></div>

 Center to Center Length
 160 mm

 Collection
 Mulholland

 Colour Group
 Gold

 Finish Code
 Golden Champagne

 Material
 Zinc Diecast

 Overall Length
 181 mm

 Projection (Height)
 37 mm

 Style Family
 Classic

 Type
 Pull

 Width
 22 mm

# **Product Description**

The Amerock A53530BBZ Mulholland(TM) 6-5/16in(160mm) CTC Pull is finished in Golden Champagne. Elegantly designed with an inviting blend of sophisticated lines, soft curves and warm tones, the traditional style of Mullholland is a timeless classic. The Gilded Bronze finish gives a dark golden look with a richly brushed texture. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

# **Product Advantages**


- · Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

## **Included Products**

Industry standard mounting hardware



#### **Technical Documents**

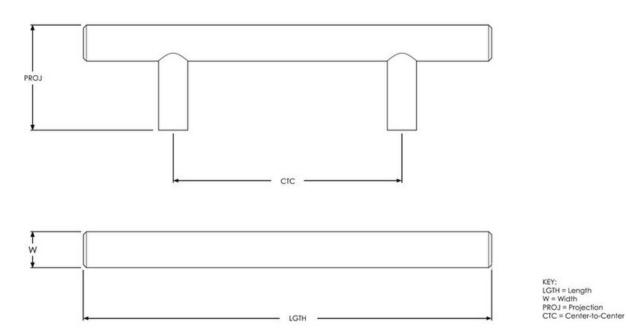

View this product online at <a href="https://marathonhardware.com/pd/A53530BBZ">https://marathonhardware.com/pd/A53530BBZ</a>


#### **Technical Documents**



## INSTALLING NEW CABINET HARDWARE


#### Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is your to make!

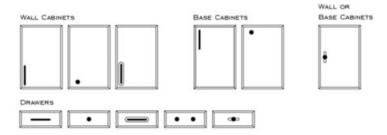

#### Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, then a 1/4" hole is required with studs sitting securely in the wood.



### **IMPORTANT** Screw Information

Amerock\* includes 8-32 x 1\* long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4\* thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4\*, then you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) used should be 1/4\* longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4\* thick front attached to a 3/4\* thick drawer box. In this situation, the total drawer thickness is 1-1/2\*, making a 1-3/4\* long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock may include metric screws instead of UNC screws.

View this product online at https://marathonhardware.com/pd/A53530BBZ

Pag	le	4	/	4