



Rochdale 3-3/4 in (96 mm) Center Cabinet Cup Pull - Satin Nickel

Part Number: A53716G10

Rochdale Cup Pull, 3-3/4 in (96 mm), Satin Nickel

Fusion of architectural details and runaway flair defines utilitarian elegance in the Rochdale Collection. Rivets and masculine design aesthetics give it an industrial look.

<div>
</div>

Center to Center Length	96 mm
Collection	Rochdale
Colour Group	Silver
Finish Code	Satin Nickel
Material	Zinc Diecast
Overall Length	135 mm
Projection (Height)	21 mm
Style Family	Transitional
Type	Cup Pull
Width	22 mm

Product Description

The Amerock A53716G10 Rochdale(TM) 3-3/4in(96mm) CTC Cup Pull is finished in Satin Nickel. Fusion of architectural details and runaway flair defines utilitarian elegance in the Rochdale Collection. Rivets and masculine design aesthetics give it an industrial look. The classic Satin Nickel finish provides a sleek, lightly brushed, warm grey metallic look. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

Product Advantages


- Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

Included Products

Industry standard mounting hardware



Technical Documents

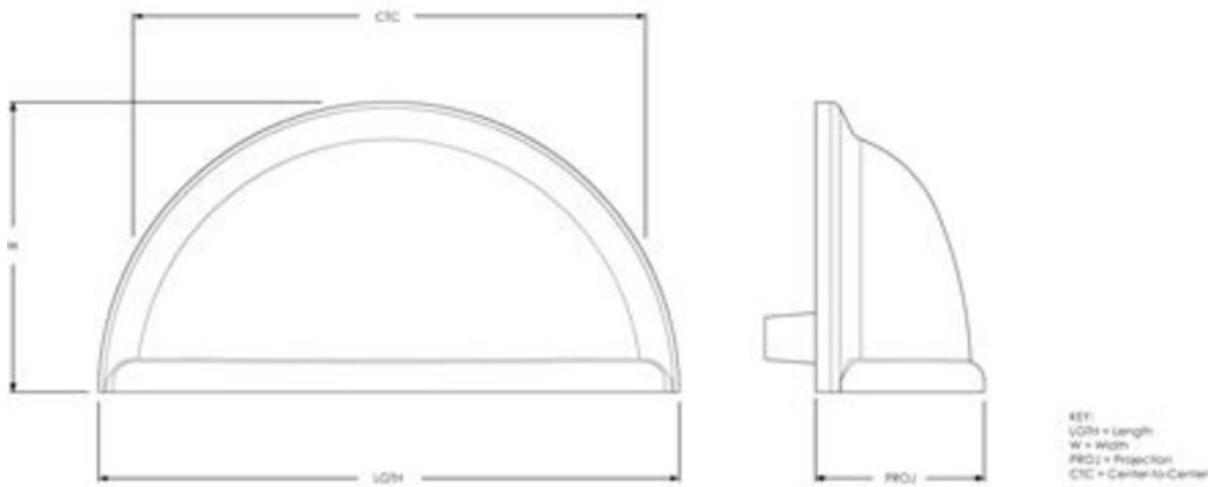

View this product online at <https://marathonhardware.com/pd/A53716G10>




Technical Documents



INSTALLING NEW CABINET HARDWARE


Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is your to make!

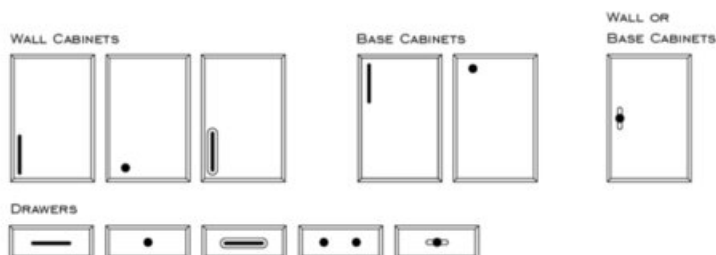

Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, then a 1/4" hole is required with studs sitting securely in the wood.

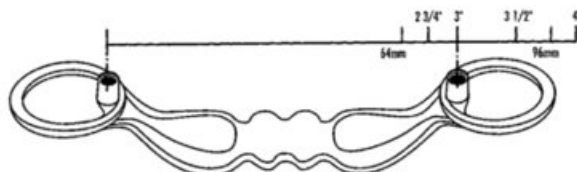

IMPORTANT Screw Information

Amerock® includes 8-32 x 1" long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4" thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4", then you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) used should be 1/4" longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4" thick front attached to a 3/4" thick drawer box. In this situation, the total drawer thickness is 1-1/2", making a 1-3/4" long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock may include metric screws instead of UNC screws.

View this product online at <https://marathonhardware.com/pd/A53716G10>

