



Traditional Classics 1-5/16 in (33 mm) DIA Cabinet Knob - Clear/Golden Champagne

Part Number: A55268CBBZ

Traditional Classics Knob, 1-5/16 in (33 mm), Clear / Golden Champagne

Traditional Classics is nostalgia redefined. Experience old world charm, art deco attitude or a retro vibe with distinctive shapes and creative details.

<div>
</div>

Collection - - - - -	Traditional Classics
Colour Group - - - - -	Clear
Finish Code - - - - -	Golden Champagne, Clear
Knob Diameter - - - - -	33 mm
Material - - - - -	Zinc + Tempered Glass
Mounting Type - - - - -	8-32 Machine Screw
Overall Length - - - - -	33 mm
Projection (Height) - - - - -	29 mm
Style Family - - - - -	Classic
Type - - - - -	Knob
Width - - - - -	33 mm

Product Description

The Amerock A55268CBBZ Traditional Classics 1-5/16in(33mm) DIA Knob is finished in Clear/Golden Champagne. Traditional Classics is nostalgia redefined. Experience old world charm, art deco attitude or a retro vibe with distinctive shapes and creative details. Golden Champagne: raise a toast to this rich metallic finish. Warm and inviting without being brassy, this attractive hue elevates designs with enviable versatility. Use for a soft and elegant touch on lighter finishes or as a contrasting pop against darker finishes. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

Product Advantages


- Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

Included Products

Industry standard mounting hardware



Technical Documents

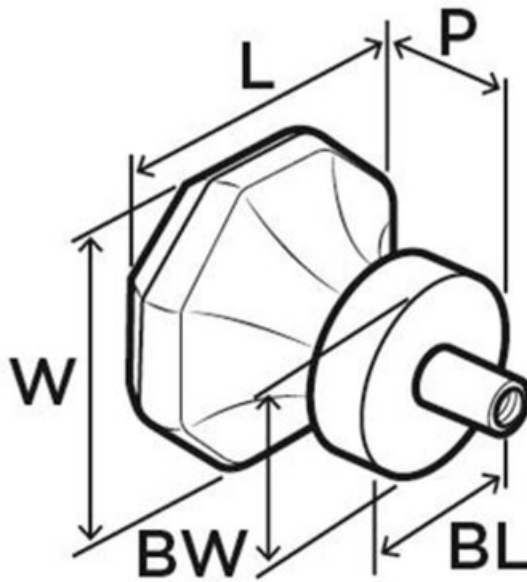

L (Length) = 1-5/16in(33mm)

W (Width) = 1-5/16in(33mm)

P (Projection) = 1-1/8in(29mm)

BL (Base Length) = 13/16in(21mm)


BW (Base Width) = 13/16in(21mm)

Profile# 55268

View this product online at <https://marathonhardware.com/pd/A55268CBBZ>



Technical Documents

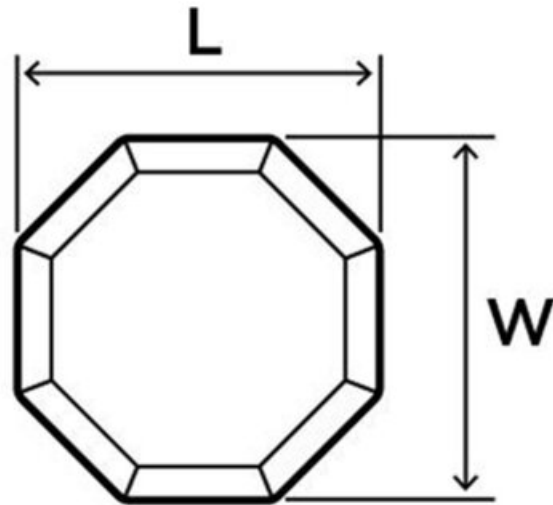

L (Length) = 1-5/16in(33mm)


W (Width) = 1-5/16in(33mm)

Profile# 55268

View this product online at <https://marathonhardware.com/pd/A55268CBBZ>



Technical Documents

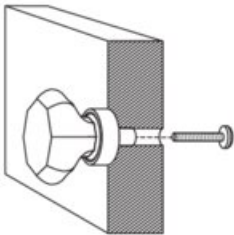

INSTALLATION
INSTRUCTIONS TO
ENSURE PROPER FIT

- Insert cabinet stem into cabinet hole. Knob base should rest against cabinet face.

• If knob stem does not fit into current cabinet hole - enlarge hole with 1/4in drill bit.

• Tighten knob with attachment screw until snug. Screw should engage a minimum of six threads.

Note: Cabinet doors and drawers can vary in thickness. Due to varying sizes the attachment screw may have to be altered to accommodate the varying thicknesses in addition to altering the hole size for the knob stem.

• Please handle glass knobs with care. Excessive force and or neglect can cause fracturing of glass and injury. Remove or discard any broken or fractured glass. Amerock is not responsible for negligence during installation.

INSTRUCTIONS POUR UNE INSTALLATION
APPROPRIÉE

- Insérez la tige dans le trou de l'armoire. Le bouton devrait reposer contre l'avant de l'armoire.
- Si la tige du bouton ne peut être insérée dans le trou de l'armoire, élargissez-le à l'aide d'un foret de 6 mm (1/4 po).

• Serrez le bouton à l'aide de la vis de fixation. Enfoncez la vis d'au moins 6 filets.
Remarque : L'épaisseur des portes et des tiroirs d'armoire peut varier. Il se peut que vous ayez à changer la vis de fixation en raison de ces variations d'épaisseur, en plus de devoir modifier la taille du trou pour la tige du bouton.

• Manipulez les pièces de verre avec soin. Une pression excessive ou une négligence peut briser le verre et causer des blessures. Retirez et jetez les morceaux de verre brisé. Amerock n'est pas responsable des négligences lors de l'installation.

INSTRUCCIONES DE INSTALACIÓN PARA
ASEGURAR UN AJUSTE ADECUADO

- Inserte el vástago del gabinete en el orificio del gabinete. La base de la perilla debe reposar sobre la parte frontal del gabinete.

• Si la espiga de la perilla no encaja en el orificio actual del gabinete, agrande este último con una broca de 1/4in.

• Ajuste la perilla con el tornillo de unión hasta que esté bien sujeto. El tornillo debe tener al menos seis hilos enroscados.

Nota: El grosor de las puertas y de las gavetas de los gabinetes puede variar. Debido a estas variaciones, puede que se necesite modificar el tornillo de unión para ajustarlo al grosor, además de modificar el tamaño del orificio para la espiga de la perilla.

• Sírvase manipular las perillas de vidrio con cuidado. La fuerza excesiva o la negligencia pueden romper el vidrio y causar daño. Retire o deseche cualquier vidrio roto o fracturado. Amerock no es responsable de actos de negligencia durante la instalación.

