



## Traditional Classics 1-1/4 in (32 mm) DIA Cabinet Knob - Clear/Oil-Rubbed Bronze

**Part Number: A14303ORB**

Traditional Classics Round Acrylic Knob, 1-1/4 in (32 mm), Clear / Oil-Rubbed Bronze

Traditional Classics is nostalgia redefined. Experience old world charm, art deco attitude or a retro vibe with distinctive shapes and creative details.

<div><br></div>

Collection - - - - -	Traditional Classics
Colour Group - - - - -	Clear
Finish Code - - - - -	Oil-Rubbed Bronze, Clear
Knob Diameter - - - - -	32 mm
Material - - - - -	Zinc + Acrylic
Mounting Type - - - - -	8-32 Machine Screw
Projection (Height) - - - - -	35 mm
Style Family - - - - -	Classic
Type - - - - -	Knob

### Product Description

The Amerock A14303ORB Traditional Classics 1-1/4in(32mm) DIA Knob is finished in Clear/Oil-Rubbed Bronze. Traditional Classics is nostalgia redefined. Experience old world charm, art deco attitude or a retro vibe with distinctive shapes and creative details. The Oil-Rubbed Bronze finish is a rich, dark brown old world finish with striking light and dark accents. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

### Product Advantages


- Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

### Included Products

Industry standard mounting hardware



## Technical Documents

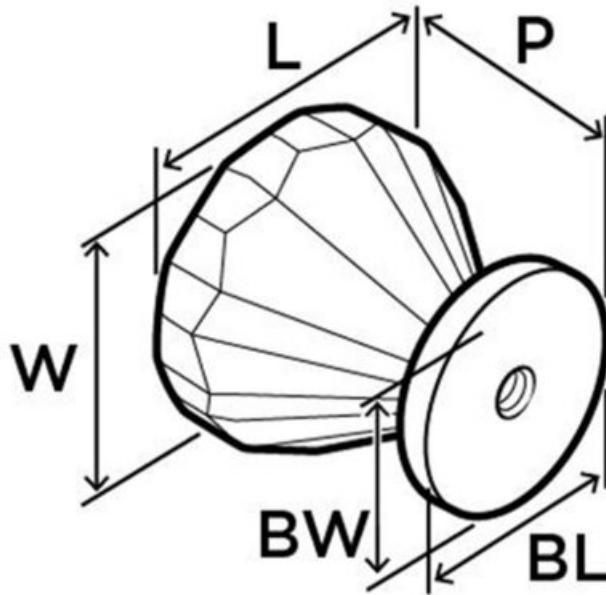

**L (Length) = 1-1/4in(32mm)**

**W (Width) = 1-1/4in(32mm)**

**P (Projection) = 1-3/8in(35mm)**

**BL (Base Length) = 7/8in(22mm)**


**BW (Base Width) = 7/8in(22mm)**

Profile# 14303

View this product online at <https://marathonhardware.com/pd/A14303ORB>



## Technical Documents

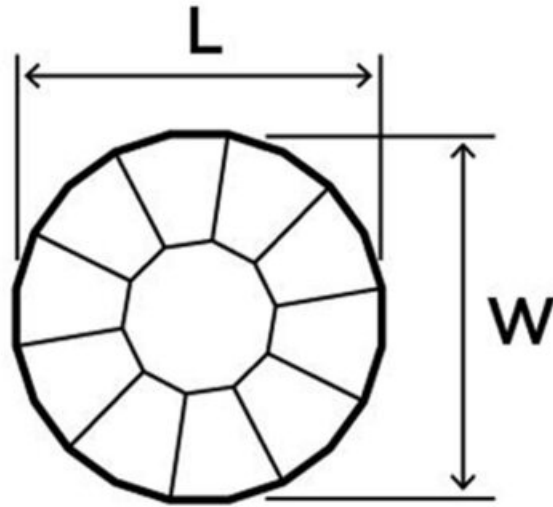

**L (Length) = 1-1/4in(32mm)**


**W (Width) = 1-1/4in(32mm)**

Profile# 14303

View this product online at <https://marathonhardware.com/pd/A14303ORB>



Technical Documents

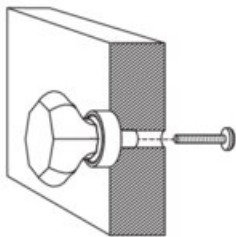

INSTALLATION INSTRUCTIONS TO ENSURE PROPER FIT	INSTRUCTIONS POUR UNE INSTALLATION APPROPRIÉE	INSTRUCCIONES DE INSTALACIÓN PARA ASEGURAR UN AJUSTE ADECUADO
<ul style="list-style-type: none"><li>• Insert cabinet stem into cabinet hole. Knob base should rest against cabinet face.</li></ul> <ul style="list-style-type: none"><li>• If knob stem does not fit into current cabinet hole - enlarge hole with 1/4in drill bit.</li></ul> <ul style="list-style-type: none"><li>• Tighten knob with attachment screw until snug. Screw should engage a minimum of six threads.</li></ul> <p><b>Note:</b> Cabinet doors and drawers can vary in thickness. Due to varying sizes the attachment screw may have to be altered to accommodate the varying thicknesses in addition to altering the hole size for the knob stem.</p> <ul style="list-style-type: none"><li>• Please handle glass knobs with care. Excessive force and or neglect can cause fracturing of glass and injury. Remove or discard any broken or fractured glass. Amerock is not responsible for negligence during installation.</li></ul>	<ul style="list-style-type: none"><li>• Insérez la tige dans le trou de l'armoire. Le bouton devrait reposer contre l'avant de l'armoire.</li></ul> <ul style="list-style-type: none"><li>• Si la tige du bouton ne peut être insérée dans le trou de l'armoire, élargissez-le à l'aide d'un foret de 6 mm (1/4 po).</li></ul> <ul style="list-style-type: none"><li>• Serrez le bouton à l'aide de la vis de fixation. Enfoncez la vis d'au moins 6 filets.</li></ul> <p><b>Remarque :</b> L'épaisseur des portes et des tiroirs d'armoire peut varier. Il se peut que vous ayez à changer la vis de fixation en raison de ces variations d'épaisseur, en plus de devoir modifier la taille du trou pour la tige du bouton.</p> <ul style="list-style-type: none"><li>• Manipulez les pièces de verre avec soin. Une pression excessive ou une négligence peut briser le verre et causer des blessures. Retirez et jetez les morceaux de verre brisé. Amerock n'est pas responsable des négligences lors de l'installation.</li></ul>	<ul style="list-style-type: none"><li>• Inserte el vástago del gabinete en el orificio del gabinete. La base de la perilla debe reposar sobre la parte frontal del gabinete.</li></ul> <ul style="list-style-type: none"><li>• Si la espiga de la perilla no encaja en el orificio actual del gabinete, agrande este último con una broca de 1/4in.</li></ul> <ul style="list-style-type: none"><li>• Ajuste la perilla con el tornillo de unión hasta que esté bien sujeto. El tornillo debe tener al menos seis hilos enroscados.</li></ul> <p><b>Nota:</b> El grosor de las puertas y de las gavetas de los gabinetes puede variar. Debido a estas variaciones, puede que se necesite modificar el tornillo de unión para ajustarlo al grosor, además de modificar el tamaño del orificio para la espiga de la perilla.</p> <ul style="list-style-type: none"><li>• Sírvase manipular las perillas de vidrio con cuidado. La fuerza excesiva o la negligencia pueden romper el vidrio y causar daño. Retire o deseche cualquier vidrio roto o fracturado. Amerock no es responsable de actos de negligencia durante la instalación.</li></ul>

View this product online at <https://marathonhardware.com/pd/A14303ORB>

